


instruction sheet

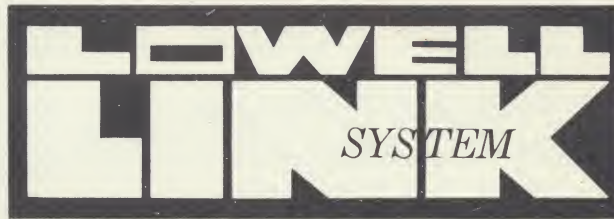


see separate instructions
for Lowell Water Weight
and Lowell Clip.

recommended for use with light weight fixtures such as the Lowell Quartz

FLOOR TO CEILING POLE


Interlock as many Poles
as necessary. Extend Poles,
with force, against
floor and ceiling.

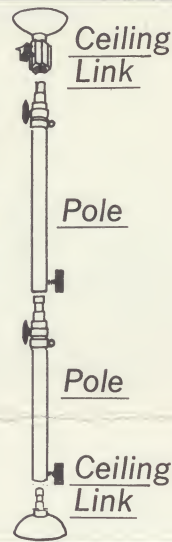

BOOM


(FOR LIGHTS &
FIXED "MIKES")

Attach mike hanger
to Interlink 1/4 20 screw

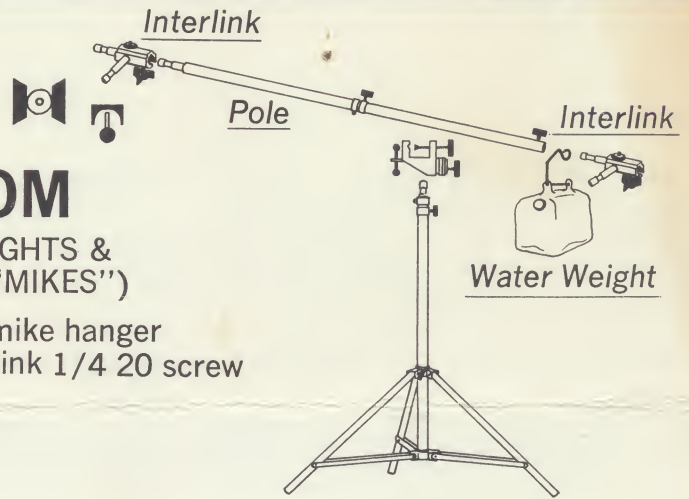


BACKGROUND SUPPORT

Poles,
Pipe or
lumber

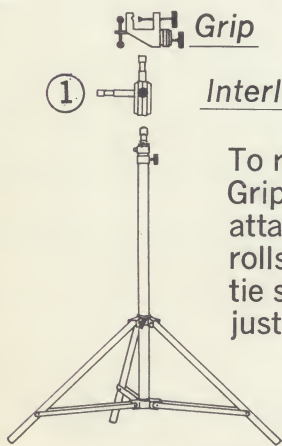


To raise stands individually, loosen
Grip tilt lock. ① Use Interlinks to
attach backlights. With cored paper
rolls, use only stands and Interlinks;
tie stands together with rope
just below Interlinks.

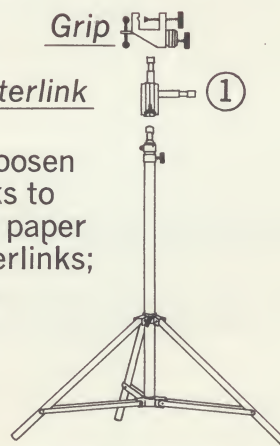

RISER

(STAND EXTENSION)


Use sand bag
or Water Weight
or Ceiling Link
for safety.

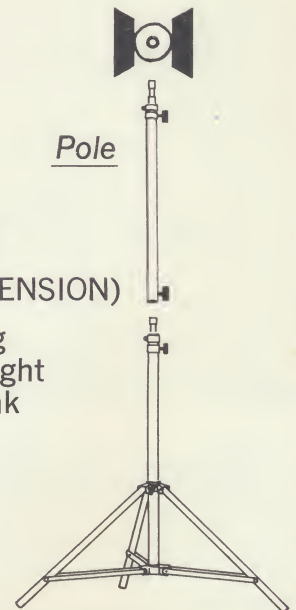


"FLAG" & "FLAG" MATS




Black Mat
Blocks light

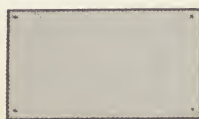


Diffuse Mat
Softens light
and shadows

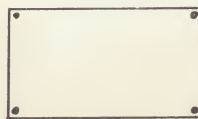

Clear Mat
Attach gels to mat with clips.
Use tape or spray for patterns.

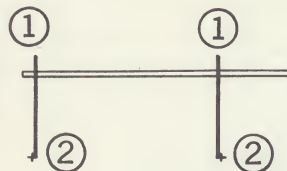


Attach Mats to
① and ① then
② and ②

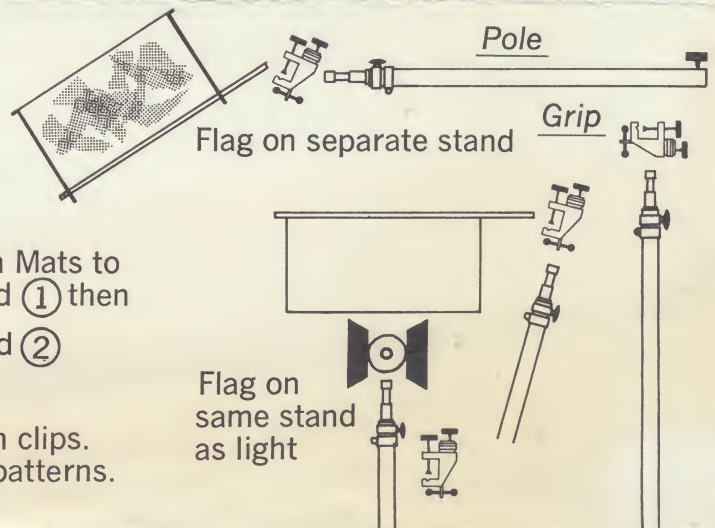


OFFSET MOUNT, DOOR BOOM, FURNITURE STAND

- ① Use paper, cardboard, or thin wood in Grip jaw to protect doors, furniture, glass.

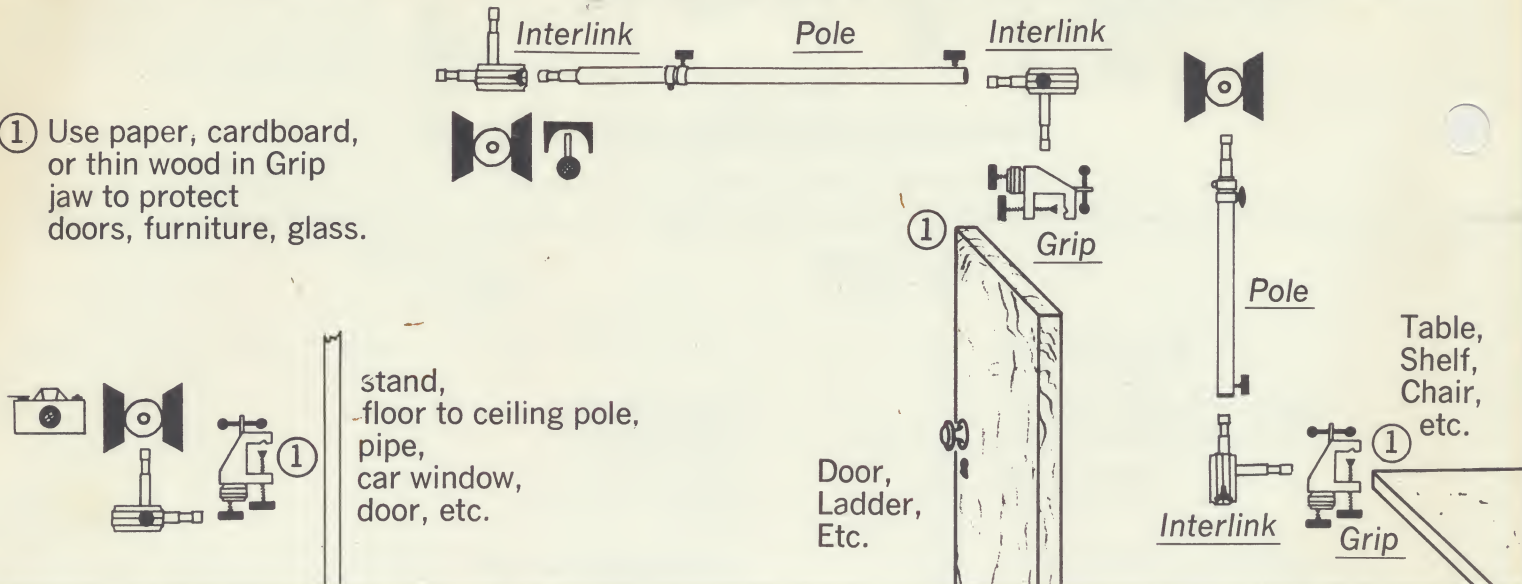


UMBRELLA RIG (FOR BOUNCE LIGHT & CAMERA SUN SHADE)

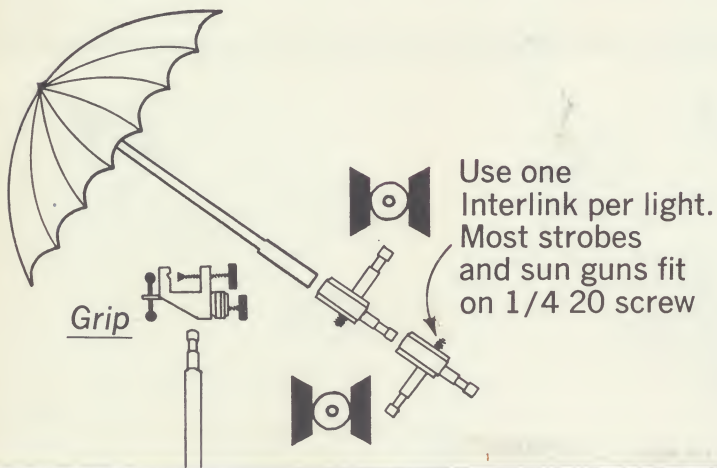

REFLECTOR BRACE

Use one or more to prevent reflector blowing over.

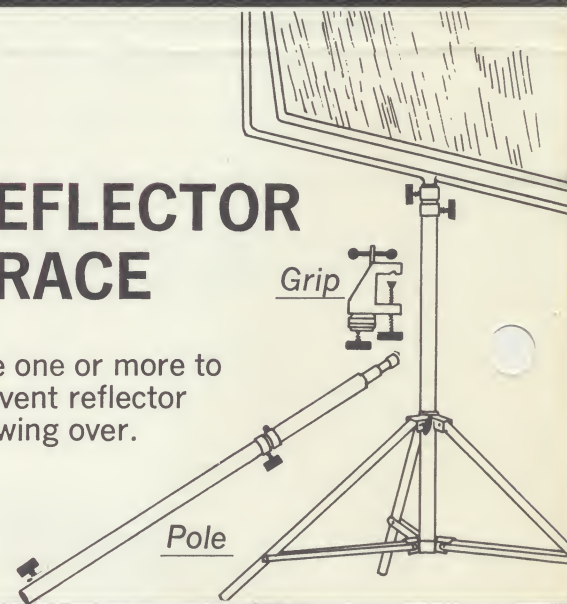

SUN DIFFUSER & BLACK SCREEN

- ① Assemble frame on flat surface with all black knobs facing up.
- ② Turn frame over and attach screen or diffuser to screws under knurled knobs.
- ③ Extend and lock all four poles.
- ④ To position without tilting, see below.
- ⑤ To control tilting, see below.

